
– How to select 1 of the maps

The Vortex ECU has 10 pre-programmed power settings (from aggressive to linear).

Insert the screwdriver into the trim and select the map you prefer.

There are 10 maps :

- *Map 0* : launch control
- *Map 2-8* : customized maps
- *Map 9* : neutral map



– Functioning of the carburation trims

With the three trims (LO, MID, HI) you can modify the carburation with the following references:

LO: 5-25% of the accelerator

MID: 33-66% of the accelerator

HI: 75-100% of the accelerator

Every step on the trims increases or decreases the quantity of fuel by 2,5%. The default position is “5, 5, 5” (in this position there are no further corrections compared to the base map).

NOTE: it is not advisable to set it lower than default unless you are an expert engine tuner or you are monitoring the stoichiometric ratio with a Lambda sensor. An air/fuel ratio higher than 0,95 can cause serious damage to the engine.

